

NETWORKING APOLLO TO PC VIA CROSS-OVER CABLE

WOULD RECOMMEND BASIC NETWORKING KNOWLEDGE.

CONNECT A CROSS OVER CABLE FROM PC TO DVR NET PORT

DVR NETWORK SETUP

MAIN MENU – SETTINGS – NEWTORK

INPUT THE FOLLOWING VALUES

IP ADDRESS – 192.168.1.2

SUBNET MASK – 255.255.255.0

GATEWAY – 192.168.1.1

ALL OTHER VALUES SHOULD BE LEFT AT DEFAULT

CLICK SAVE

APPLY THE CONFIG IMMEDIATLY



PC SETUP (RUNNING VISTA)

PLEASE NOTE USER ACCOUNT CONTROL (UAC) SHOULD BE SWITCHED OFF

VISTA START ICON – CONTROL PANEL - NETWORK AND SHARING CENTRE -

MANAGE NETWORK CONNECTIONS - -- NETWORK CONNECTIONS –

RIGHT CLICK LOCAL AREA CONNECTION - CLICK PROPERTIES –

HIGHLIGHT INTERNET PROTOCOL VERSION 4(TCP/IPV4) – CLICK PROPERTIES

ENABLE “USE THE FOLLOWING IP ADDRESS”

INPUT THE FOLLWOING VALUES

IP ADDRESS – 192.168.1.1

SUBNET MASK -255.255.255.0

DEFAULT GATEWAY – 192.168.1.2

OK - CLOSE

TO TEST CONNECTION

VISTA START ICON – TYPE “CMD” IN START SEARCH BAR

TYPE “PING 192.168.1.2”

PING STATISTICS SHOULD READ THE FOLLOWING

PACKETS: SENT = 4, RECIEVED = 4, LOST = 0 (0% LOSS)

IF NOT PLEASE REPEAT ALL STEPS, DOUBLE CHECK THAT CROSS OVER CABLE IS BEING USED

PC SETUP (RUNNING XP)

START – CONTROL PANEL – NETWORK CONNECTIONS – RIGHT CLICK LOCAL AREA CONNECTION

CLICK PROPERTIES – HIGHLIGHT INTERNET PROTOCOLS(TCP/IP) – CLICK PROPERTIES

ENABLE “USE THE FOLLOWING IP ADDRESS”

INPUT THE FOLLWOING VALUES

IP ADDRESS – 192.168.1.1

SUBNET MASK -255.255.255.0

DEFAULT GATEWAY – 192.168.1.2

OK - CLOSE



TO TEST CONNECTION

START – RUN – TYPE “CMD”

TYPE “PING 192.168.1.2”

PING STATISTICS SHOULD READ THE FOLLOWING

PACKETS: SENT = 4, RECIEVED = 4, LOST = 0 (0% LOSS)

IF NOT PLEASE REPEAT ALL STEPS, DOUBLE CHECK THAT CROSS OVER CABLE IS BEING USED

SOFTWARE SETUP

PLEASE INSTALL PRO SERVEILLANCE SOFTWARE (INCLUDED ON APOLLO SOFTWARE DISC)

USER NAME – admin

PASSWORD – admin

DEVICE – DEVICE MANAGEMENT – ADD

DEVICE NAME – USER TO CHOOSE

IP ADDRESS – 192.168.1.2

PORT NUMBER 37777

USER NAME – THE SAME AS DVR'S USERNAME

PASSWORD – THE SAME AS DVR'S PASSWORD

TOTAL CHANNELS – THE AMOUNT OF BNC CAMERA INPUTS AVAILABLE ON DVR

SAVE

CLICK – CONNECT/DISCONNECT (PLEASE NOTE RED WRITING IN BOTTOM LEFT OF SOFTWARE WINDOW SAYING EITHER DEVICE CONNECTED OR DEVICE DISCONNECTE – IF CONNECTION CANNOT BE MADE RESTART PROCESS FROM BEGINING)

YOUR DEVICE NAME WILL NOW APPEAR IN DEVICE LIST

EXPAND LIST – CAMERA NAMES WILL BECOME AVAILABLE

CLICK IN EMPTY CAMERA PREVIEW BOX TO MOVE GREEN BORDER

DOUBLE CLICK CAMERA NAME

VIDEO WILL NOW APPEAR.

FOR FURTHER SOFTWARE INSTRUCTIONS PLEASE SEE DVR MANUAL

